


COMFORT FACTORS The Breathability of Fabric

ACADEMY



WHY FEEL UNCOMFORTABLE?

Because the micro climate between skin and fabric is full with moisture, which cause hot and humid.

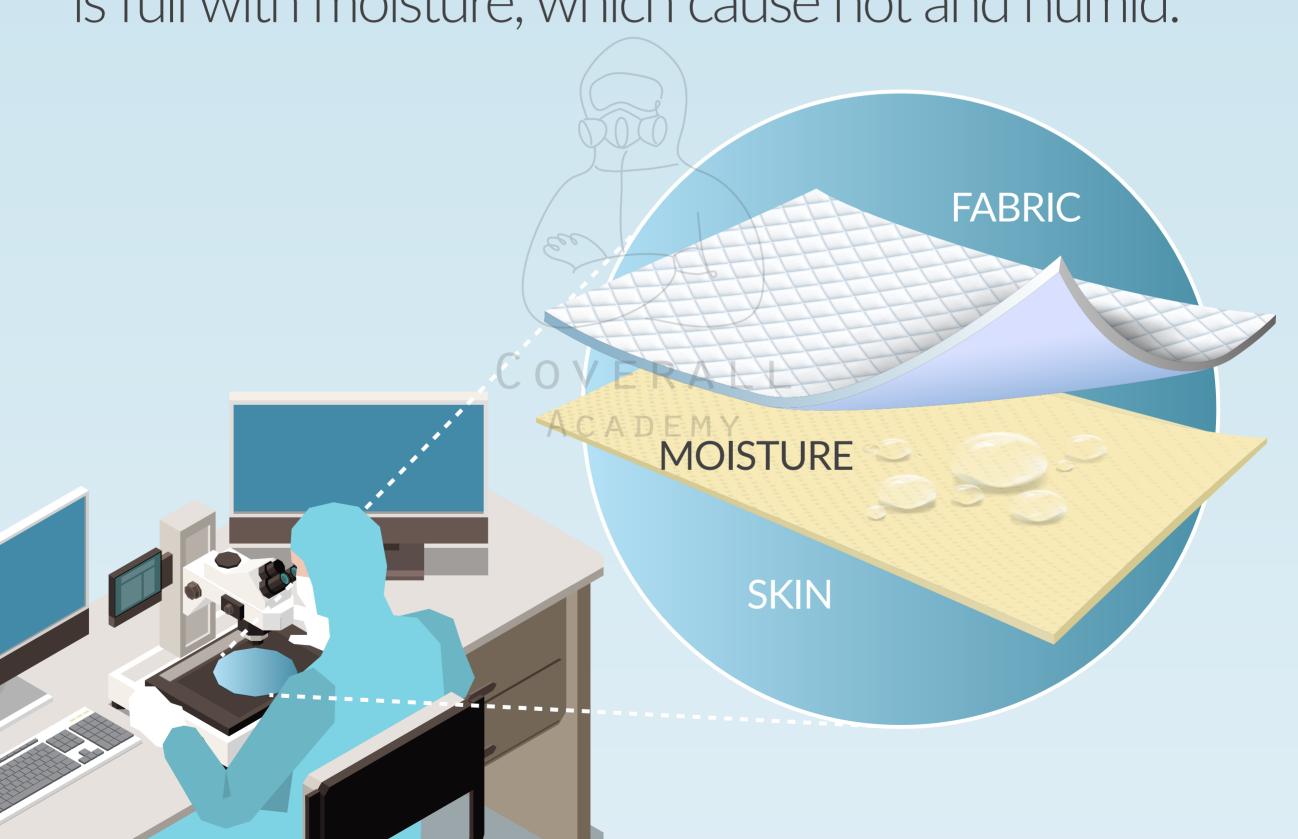






MVT

How fast moisture moves from skin to outward of fabric

Ret Value

How hard the moisture pass through fabric to outside




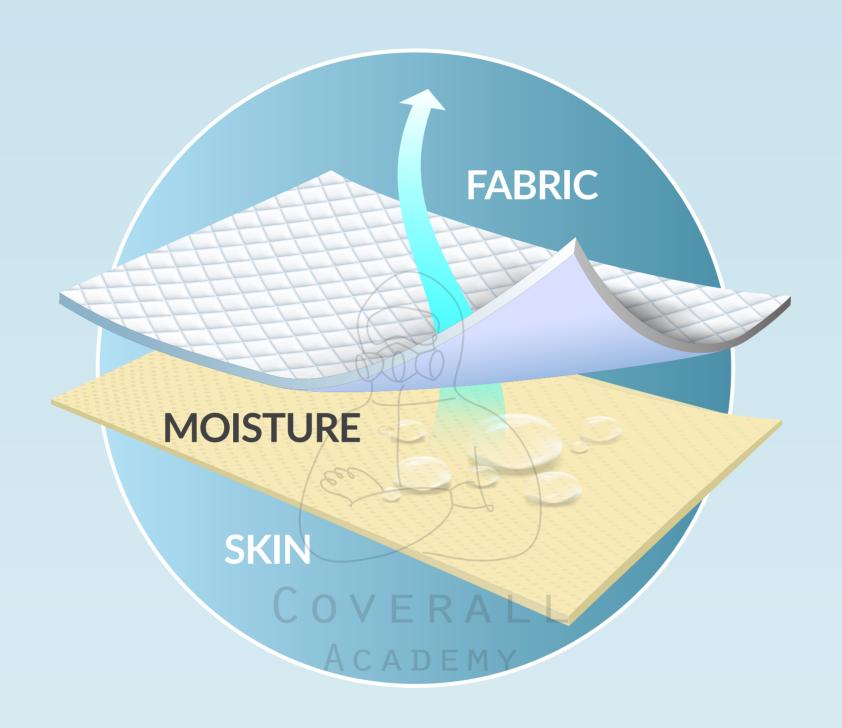

01.MVT

How many moisture can move from skin to outward of fabric under a certain of time.



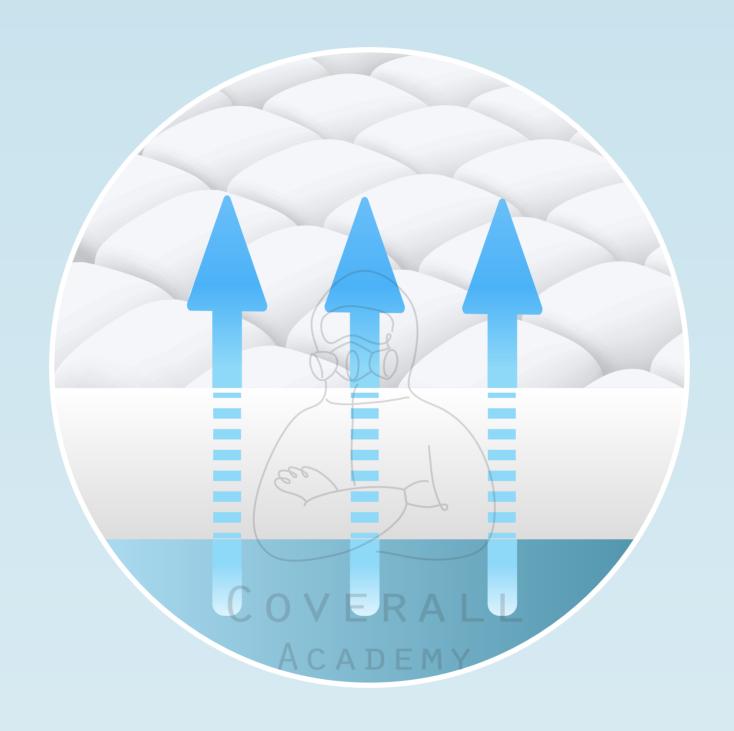

02.Ret VALUE

when the moisture contact the fabric, calculate how much effort it take to pass through.



HOW to FEEL COMFORTABLE

Greater MVT, means the moisture removed fast from the space between fabric and skin.

Smaller Ret Value, means the moisture pass through fabric easily.

